


PRN Series

Miniature HI-ROTOR/Standard type
1S, 3S, 10S, 20S, 30S, 30D

Ordering Instructions



Single vane

PRNA1S
PRNA3S
PRNA10S
PRNA20S
PRN30S

Double vane

PRN30D

④ Cushion

No mark: No mounting hardware
P : With flange plate
L1 : With one foot plate
L2 : With two foot plates

① Oscillating angle

90 : 90°
180 : 180°
270 : 270°

② Oscillating reference point

90 : 90°
45 : 45°

③ Port position

No mark : Standard
S : On the rear cover

Note: S is not available for
Models PRN30S and 30D.

⑤ Type of switch units

No mark : No switch
FR : With CT-3 switch
FU : With CT-3U switch

(FR, FU : switch position adjustable)

SR : With SR switch

SU : With SU switch


(SR, SU : Switch position fixed)

Note: Two switches are provided.


Only FR and FU are available
for PRNA1.

Oscillation Starting Point and Oscillation Angle

PRNA1S, PRNA3S, PRNA10S,
PRNA20S, PRN30S/D
Oscillating reference point at 45°

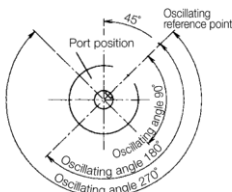

PRNA1S, PRNA3S, PRNA10S,
PRNA20S
Oscillating reference point at 90°

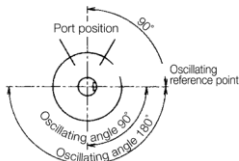

- Switch units and mounts with two foot plate are not supplied to "S" (Ports on the rear cover) model.
- Switch units cannot be used on HI-ROTORs with two foot plates (L2).
- Mounting hardware comes being not fabricated.

Model Nos. of mounting hardware

Applicable HI - ROTOR	Flange plate	Foot plate
PRNA1S	PRN1 - P	PRN1 - L
PRNA3S	PRN3 - P	PRN3 - L
PRNA10S	PRN10 - P	PRN10 - L
PRNA20S	PRN20 - P	PRN20 - L
PRN30S/ D	PRN30 - P	PRN30 - L

Note : Set screws are available.

Gentle Automatic Solution Sdn Bhd

36, Jalan Industri USJ1/13, Taman Perindustrian USJ 1, 47600 Subang Jaya, Selangor Darul Ehsan, Malaysia.

Tel : + 603 - 8023 7743 / + 603 - 8023 8743

Fax : + 603 - 8023 9743

Mobile Number : + 6012 - 273 8827 / + 6012 - 2206172 / + 6017 - 3397388

Email : sales@gentle.com.my / myfontal@gmail.com

Specifications

Model No.	Unit	PRNA1S			PRNA3S			PRNA10S			PRNA20S			PRN30S			PRN30D	
Vane		Single vane														Double vane		
Fluid		Non-lubricated air (Lubricated air)																
Oscillating angle	degree	90 ⁺⁴ ₀	180 ⁺⁴ ₀	270 ⁺⁴ ₀	90 ⁺⁴ ₀	180 ⁺⁴ ₀	270 ⁺⁴ ₀	90 ⁺⁴ ₀	180 ⁺⁴ ₄	270 ⁺⁴ ₄	90 ⁺⁴ ₄	180 ⁺⁴ ₄	270 ⁺⁴ ₄	90 ⁺³ ₃	180 ⁺³ ₃	270 ⁺³ ₃	90 ⁺³ ₀	
Oscillating reference point	degree	45 , 90		45	45 , 90		45	90		45	45 , 90		45	45			45	
Port size		M5												Rc%		Rc%		
Minimum working pressure	MPa	0.1									0.08			0.1		0.08		
Operation pressure range	MPa	0.2 ~ 0.7									0.2 ~ 1							
Proof withstanding pressure	MPa	1.05									1.5							
Temperature range	°C	-5 ~ 80												-5 ~ 60				
Maximum frequency of use	Hz	5	3	1.6	4	2.5	1	4	2.5	1.5	3.5	2	1	3	1.5	1	3	
Internal volume	cm³	1.4	1.4	1.5	3.4	3.4	4	9.8	9.8	12	17	17	21	37	37	43	34	
Allowable radial load	N	30			40			50			300			400				
Allowable thrust load	N	3			4			4			25			30				
Allowable energy	mJ	0.6			1.5			3			15			25				
Mass	kg	0.036			0.07			0.14			0.25			0.47	0.46	0.48		



- Maximum frequency of use at the supply pressure of 0.5 MPa (Unloaded).
- Please make sure to use the HI-ROTOR within allowable energy.
- HI-ROTORS with keyways are provided with keys.
- For HI-ROTORS other than standard, please contact FONTAL.

Output (Effective torque)

(Unit : N•cm)

Model No.		Supply pressure(MPa)								
		0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1.0
Single vane	PRNA1S	4.9	7.6	10.1	12.9	15.6	18.5	—	—	—
	PRNA3S	10	17	24	31	38	45	—	—	—
	PRNA10S	35	56	75	98	120	139	—	—	—
	PRNA20S	59	95	133	170	210	249	287	326	368
	PRN30S	110	180	250	319	410	480	580	650	720
Double vane	PRN30D	270	440	600	770	950	1120	1299	1480	1660

Gentle Automatic Solution Sdn Bhd

36,Jalan Industri USJ1/13,Taman Perindustrian USJ 1, 47600 Subang Jaya, Selangor Darul Ehsan, Malaysia.

Tel : + 603 - 8023 7743 / + 603 - 8023 8743

Mobile Number : + 6012 - 273 8827 / + 6012 - 2206172 / + 6017 - 3397388

Fax : + 603 - 8023 9743

Email : sales@gentle.com.my / myfontal@gmail.com

Oscillating time range

(Unit : s)

Model No.	Oscillating angle		
	90 °	180 °	270 °
PRNA1S	0.03 ~ 0.6	0.06 ~ 1.2	0.09 ~ 1.8
PRNA3S	0.04 ~ 0.8	0.08 ~ 1.6	0.12 ~ 2.4
PRNA10S	0.045 ~ 0.9	0.09 ~ 1.8	0.135 ~ 2.7
PRNA20S	0.05 ~ 1.0	0.1 ~ 2.0	0.15 ~ 3.0
PRN30S/ D	0.07 ~ 0.7	0.14 ~ 1.4	0.21 ~ 2.1


HI - ROTOR with switch

CT and SR type proximity switch

Type of switch	Mounting	Load voltage (V)	Load current (mA)	Indicating lamp (Lights up at ON)	Applications
CT- 3 CT- 3U	Switch position adjustable	DC5 ~ 30	5 ~ 200	○	Relay PLC IC circuit
SR SU	Switch position fixed				

Construction

PRNA1S, PRNA3S, PRNA10S, PRNA20S, PRN30S

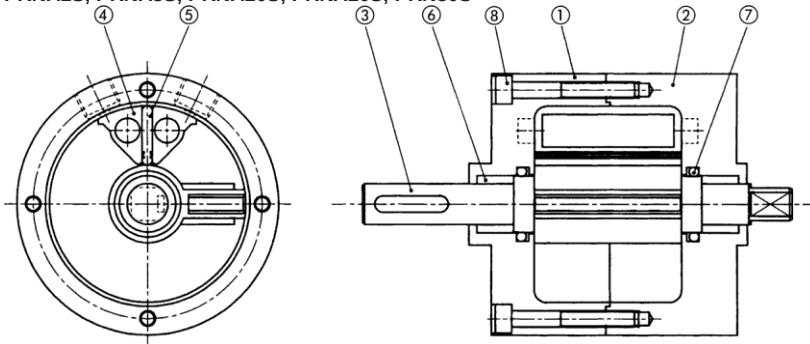

Gentle Automatic Solution Sdn Bhd

36, Jalan Industri USJ1/13, Taman Perindustrian USJ 1, 47600 Subang Jaya, Selangor Darul Ehsan, Malaysia.

Tel : + 603 - 8023 7743 / + 603 - 8023 8743

Fax : + 603 - 8023 9743

Mobile Number : + 6012 - 273 8827 / + 6012 - 2206172 / + 6017 - 3397388

Email : sales@gentle.com.my / myfontal@gmail.com

Main Components

No.	Description	Material	
		PRN30S	PRNA1S, PRNA3S, PRNA10S, PRNA20S
1	Body A	Aluminum alloy	
2	Body B	Aluminum alloy	
3	Vane shaft	Steel + Resin + NBR	Steel + Resin + HNBR
4	Shoe	Resin	
5	Shoe seal	NBR	HNBR
6	Bearing bush	—	
7	O- ring	NBR	HNBR
8	Screws group	Steel	


Model No. of Packing Kit

Applicable HI - ROTOR	Model No.
PRNA1S	PRNA1S- PS
PRNA3S, PROA3S	PRNA3S- PS
PRNA10S, PROA10S	PRNA10S- PS
PRNA20S, PROA20S	PRNA20S- PS
PRNA30S, PRO30S	PRN30S- PS

Note : A set of packings consists of part No.

Construction

PRNA1S, PRNA3S, PRNA10S, PRNA20S, PRN30S

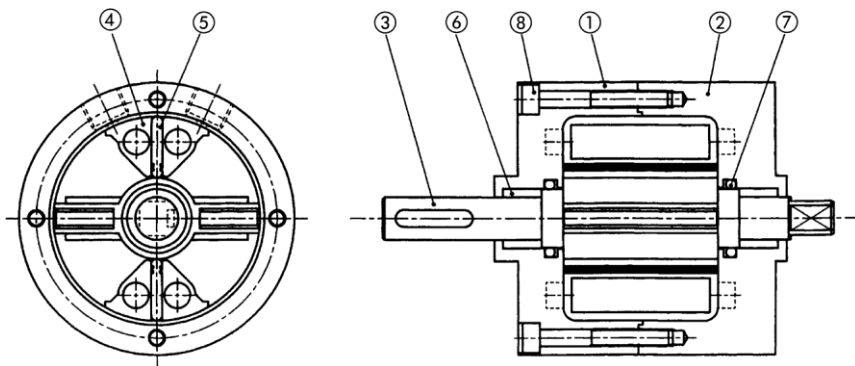

Gentle Automatic Solution Sdn Bhd

36,Jalan Industri USJ1/13,Taman Perindustrian USJ 1, 47600 Subang Jaya, Selangor Darul Ehsan, Malaysia.

Tel : + 603 - 8023 7743 / + 603 - 8023 8743

Fax : + 603 - 8023 9743

Mobile Number : + 6012 - 273 8827 / + 6012 - 2206172 / + 6017 - 3397388

Email : sales@gentle.com.my / myfontal@gmail.com

Main Components

No.	Description	Material
		PRN30D
1	Body A	Aluminum alloy
2	Body B	Aluminum alloy
3	Vane shaft	Steel + Resin + NBR
4	Shoe	Resin
5	Shoe seal	NBR
6	Bearing bush	—
7	O- ring	NBR
8	Screws group	Steel

Model No. of Packing Kit


Applicable HI - ROTOR	Model No.
PRN30D , PRO30D	PRN30D - PS

Note : A set of packings consists of part No.3, 5 and 7.


Gentle Automatic Solution Sdn Bhd

36,Jalan Industri USJ1/13,Taman Perindustrian USJ 1, 47600 Subang Jaya, Selangor Darul Ehsan, Malaysia.
Tel : + 603 - 8023 7743 / + 603 - 8023 8743 Mobile Number : + 6012 - 273 8827 / + 6012 - 2206172 / + 6017 - 3397388
Fax : + 603 - 8023 9743 Email : sales@gentle.com.my / myfontal@gmail.com


Basic type
PRNA1S-□-□

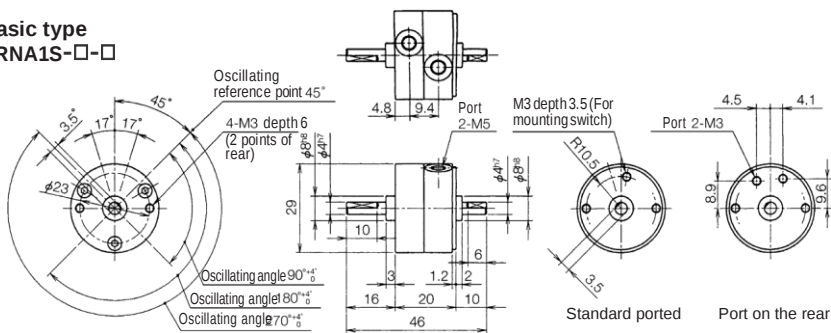


With flange plate
PRNA1S-□-□-P

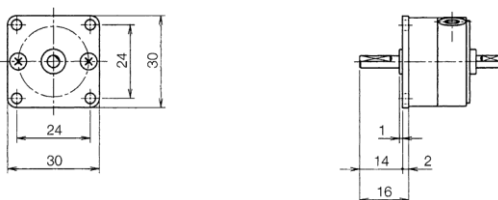

With foot plate
PRNA1S-□-□- L1(L2)

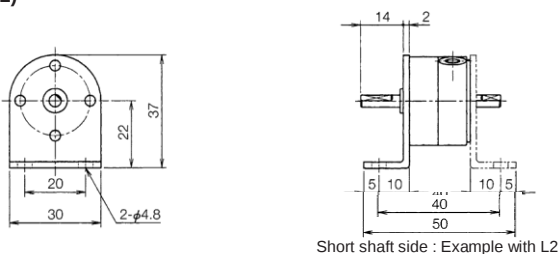

With switch unit
(Switch position adjustable type)
PRNA1S-□-□-□- FR(FU)

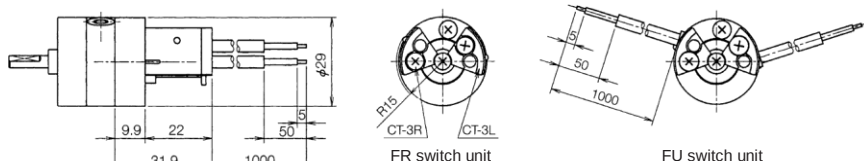

Gentle Automatic Solution Sdn Bhd




36, Jalan Industri USJ1/13, Taman Perindustrian USJ 1, 47600 Subang Jaya, Selangor Darul Ehsan, Malaysia.

Tel : + 603 - 8023 7743 / + 603 - 8023 8743



Fax : + 603 - 8023 9743

Mobile Number : + 6012 - 273 8827 / + 6012 - 2206172 / + 6017 - 3397388

Email : sales@gentle.com.my / myfontal@gmail.com

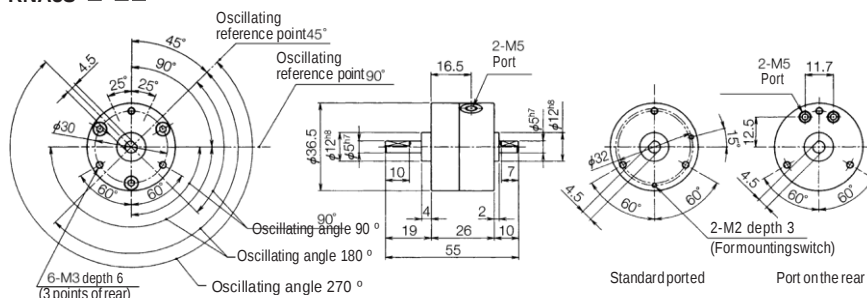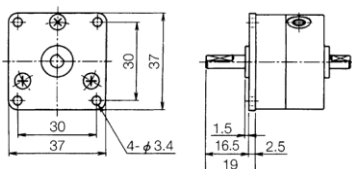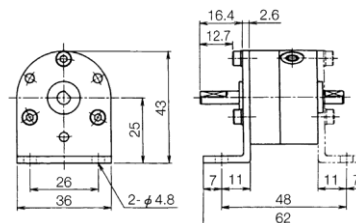Basic type**PRNA3S-□-□□****With flange plate****PRNA3S-□-□□- P****With foot plate****PRNA3S-□-□□- L1(L2)**

Short shaft side : Example with L2

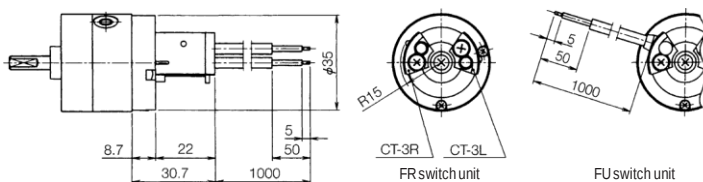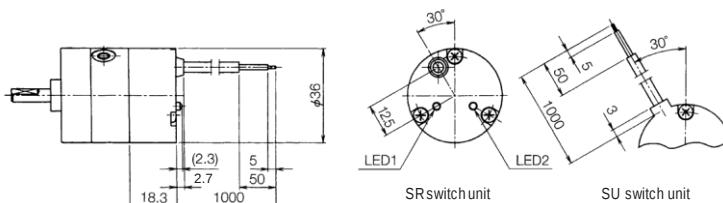With switch unit**(Switch position adjustable type)****PRNA3S-□-□-□- FR(FU)****With switch unit****(Switch position fixed type)****PRNA3S-□-□-□- SR(SU)****Gentle Automatic Solution Sdn Bhd**

36, Jalan Industri USJ1/13, Taman Perindustrian USJ 1, 47600 Subang Jaya, Selangor Darul Ehsan, Malaysia.

Tel : + 603 - 8023 7743 / + 603 - 8023 8743


Mobile Number : + 6012 - 273 8827 / + 6012 - 2206172 / + 6017 - 3397388

Fax : + 603 - 8023 9743

Email : sales@gentle.com.my / myfontal@gmail.com


Basic type PRNA10S-

□-□□

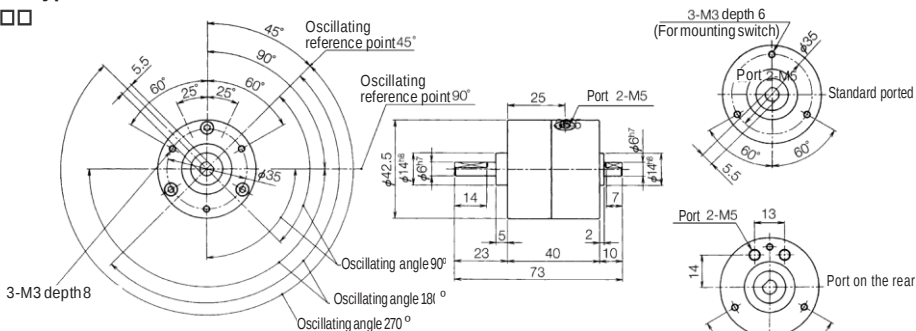


With flange plate

PRNA10S-□-□□- P

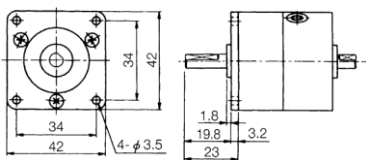

With foot plate

PRNA10S-□-□□- L1(L2)

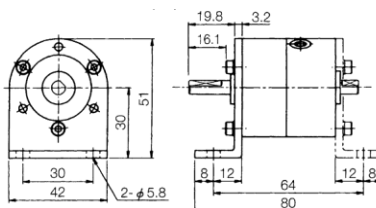


Short shaft side : Example with L2

With switch unit

(Switch position adjustable type)


PRNA10S-□-□-□- FR(FU)

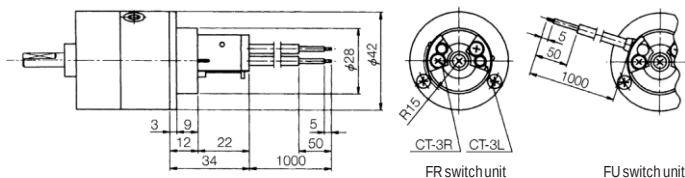

With switch unit

(Switch position fixed type)

PRNA10S-□-□-□- SR(SU)

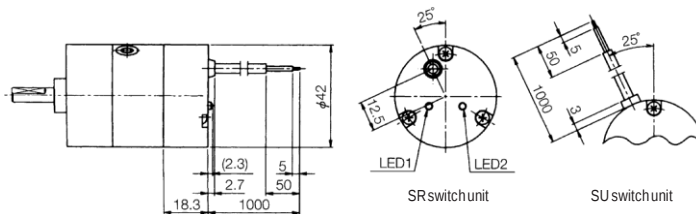

Note: LED1 comes on at the oscillating reference point and LED2 at the end of oscillation.

Note: SR and SU switch cannot be mouted on PRNA10S-270-45

Gentle Automatic Solution Sdn Bhd

36,Jalan Industri USJ1/13,Taman Perindustrian USJ 1, 47600 Subang Jaya, Selangor Darul Ehsan, Malaysia.

Tel : + 603 - 8023 7743 / + 603 - 8023 8743

Mobile Number : + 6012 - 273 8827 / + 6012 - 2206172 / + 6017 - 3397388



Fax : + 603 - 8023 9743

Email : sales@gentle.com.my / myfontal@gmail.com

(Unit : mm)


Basic type

PRNA20S-□-□□

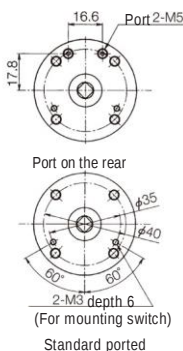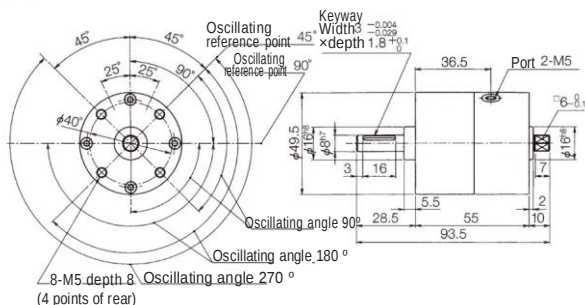


With flange plate

PRNA20S-□-□□- P

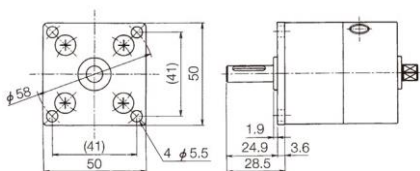

With foot plate

PRNA20S-□-□□- L1 (L2)


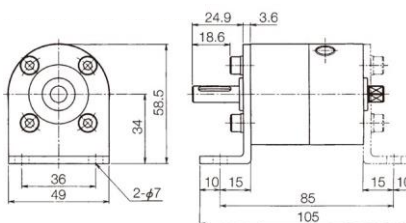


Short shaft side : Example with L 2

With switch unit

(Switch position adjustable type)



PRNA20S-□-□-□-FR(FU)

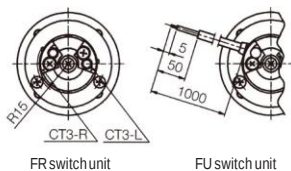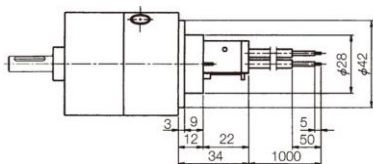

With switch unit

(Switch position fixed type)

PRNA20S-□-□-□- SR(SU)

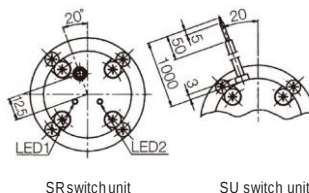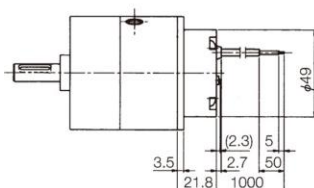

Note: LED1 comes on at the oscillating reference point and LED2 at the end of oscillation.

Gentle Automatic Solution Sdn Bhd

36, Jalan Industri USJ1/13, Taman Perindustrian USJ 1, 47600 Subang Jaya, Selangor Darul Ehsan, Malaysia.

Tel : + 603 - 8023 7743 / + 603 - 8023 8743


Mobile Number : + 6012 - 273 8827 / + 6012 - 2206172 / + 6017 - 3397388

Fax : + 603 - 8023 9743

Email : sales@gentle.com.my / myfontal@gmail.com


Basic type

PRNA30S/ D-□-□

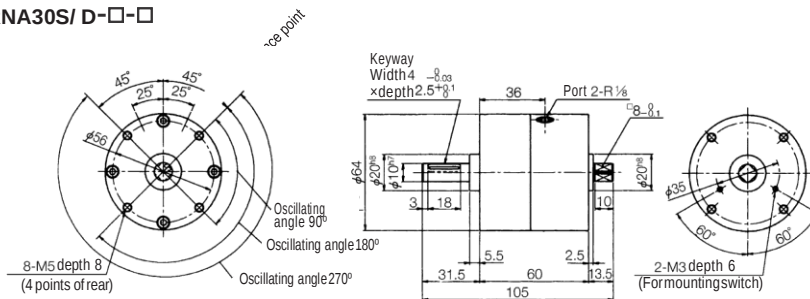


With flange plate

PRNA30S/ D-□-□-P

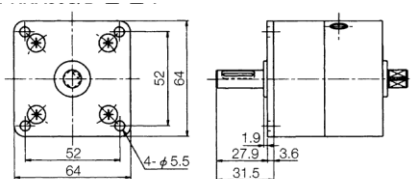

With foot plate

PRNA30S/ D-□-□-L1 (L2)

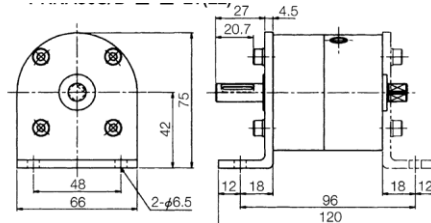


Short shaft side : Example with L 2

With switch unit

(Switch position adjustable type)


PRNA30S/ D-□-□-□-FR(FU)

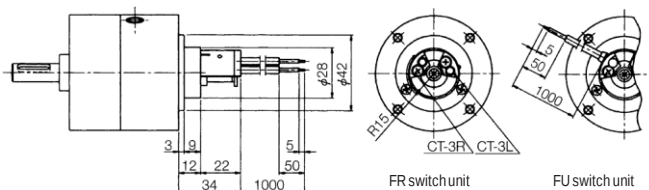

With switch unit

(Switch position fixed type)

PRNA30S/ D-□-□-□-SR(SU)

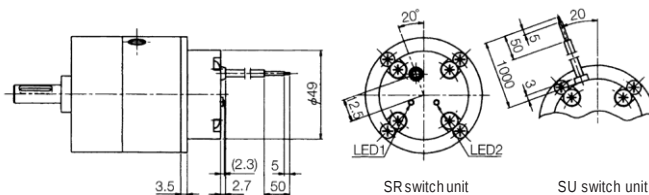

Note: LED1 comes on at the oscillating reference point and LED2 at the end of oscillation.

Gentle Automatic Solution Sdn Bhd

36, Jalan Industri USJ1/13, Taman Perindustrian USJ 1, 47600 Subang Jaya, Selangor Darul Ehsan, Malaysia.

Tel : + 603 - 8023 7743 / + 603 - 8023 8743

Fax : + 603 - 8023 9743

Mobile Number : + 6012 - 273 8827 / + 6012 - 2206172 / + 6017 - 3397388

Email : sales@gentle.com.my / myfontal@gmail.com