MF□ - C

Individual Wiring Type Manifold
Separate Type

MF□-CC
Common SUP, common EXH, ports 2&4 on the side

MF□-CI
Common SUP, individual EXH, ports 2&4 on the side

Manifold Specificiations

		MF□-CC06	MF□-CC08	MF□-CC10	MF□-CC15	MF□-CC25
Type of manifold		Common SUP, common EXH	Common SUP, common EXH	Common SUP, common EXH	Common SUP, common EXH	Common SUP, common EXH
Port size	Port 1	Rc¼	Rc⅜	Rc½	Rc¾	Rc1
	Port 3, 5	Rc¼	Rc⅜	Rc½	Rc¾	Rc1
	Port 2, 4	Rc⅛	Rc⅜	Rc½	Rc½	Rc1
Number of stations		2~20	2~20	2~20	2~20	2~20
Mountable solenoid valve		AS2406-NB AD2406-NB AD3406-NB ADE3406-NB	AS2408-NB AD2408-NB AD3408-NB ADE3408-NB	AS2410-NB AD2410-NB AD3410-NB ADE3410-NB	AS2415-NB AD2415-NB AD3415-NB ADE3415-NB	AS2425-NB AD2425-NB AD3425-NB ADE3425-NB
Blank plate		CC06-BP	CC08-BP	CC10-BP	CC15-BP	CC25-BP
Type of manifold		MF□-CI06	MF□-CI08	MF□-CI10	MF□-CI15	MF□-CI25
		Common SUP, individual EXH	Common SUP, individual EXH	Common SUP, individual EXH	Common SUP, individual EXH	Common SUP, individual EXH
Port size	Port 1	Rc¼	Rc⅜	Rc½	Rc¾	Rc1
	Port 3, 5	Rc¼	Rc¼, ⅜	Rc⅜, ½	Rc½	Rc1

Gentle Automatic Solution Sdn Bhd
36,Jalan Industri USJ1/13,Taman Perindustrian USJ 1, 47600 Subang Jaya, Selangor Darul Ehsan, Malaysia.
Tel : + 603 - 8023 7743 / + 603 - 8023 8743 Mobile Number : + 6012 - 273 8827 / + 6012 - 2206172 / + 6017 - 3397388
Fax : + 603 - 8023 9743 Email : sales@gentle.com.my / myfontal@gmail.com

	Port 2, 4	Rc⅛, Rc¼	Rc¼, ⅜	Rc⅜, ½	Rc½	Rc1
Number of stations		2~20	2~20	2~20	2~20	2~20
Mountable solenoid valve		AS2406-NB AD2406-NB AD3406-NB ADE3406-NB	AS2408-NB AD2408-NB AD3408-NB ADE3408-NB	AS2410-NB AD2410-NB AD3410-NB ADE3410-NB	AS2415-NB AD2415-NB AD3415-NB ADE3415-NB	AS2425-NB AD2425-NB AD3425-NB ADE3425-NB
Blank plate		CC06-BP	CC08-BP	CC10-BP	CC15-BP	CC25-BP

Manifold

MF 5 – CC 08 – 02

Number of stations
2 : 2 station
⋮ ⋮
10 : 10 station

Type of manifold
CC:
Common SUP, common EXH

CI:
Common SUP, individual EXH

Mountable solenoid valve series
06: A06 series
08: A08 series
10: A10 series
15: A15 series
25: A25 series

port size 2&4
01: RC⅛
02: RC¼
03: RC⅜
04: RC½
06: RC¾
08: RC1

Gentle Automatic Solution Sdn Bhd
36,Jalan Industri USJ1/13,Taman Perindustrian USJ 1, 47600 Subang Jaya, Selangor Darul Ehsan, Malaysia.
Tel : + 603 - 8023 7743 / + 603 - 8023 8743 Mobile Number : + 6012 - 273 8827 / + 6012 - 2206172 / + 6017 - 3397388
Fax : + 603 - 8023 9743 Email : sales@gentle.com.my / myfontal@gmail.com

AS2408 – NB – 110 | P

Model No.

AS24



AD24



AD34



ADE34



Port size

NB: Without sub-base

Versions

No mark : Standard
I : With indicator light
K : With surge suppressor
P : With indicator light & surge suppressor

Voltage

110 : AC110V
220 : AC220V

※: Made to order

Tagging method

● Specify the type and number of manifolds and solenoid valves, as well as number of blank plate in accordance with the following example of description.

Example:

MF5-CC08-02 1 pcs.
PMS2408-NB-110 2 pcs.
PMD3406-NB-110 1 pcs.
CC08-BP 1 pcs.

Gentle Automatic Solution Sdn Bhd
36,Jalan Industri USJ1/13,Taman Perindustrian USJ 1, 47600 Subang Jaya, Selangor Darul Ehsan, Malaysia.
Tel : + 603 - 8023 7743 / + 603 - 8023 8743 Mobile Number : + 6012 - 273 8827 / + 6012 - 2206172 / + 6017 - 3397388
Fax : + 603 - 8023 9743 Email : sales@gentle.com.my / myfontal@gmail.com

MF□-CC06

(Unit: mm)

Specifications for connection

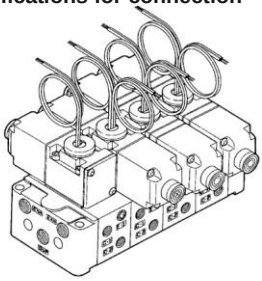

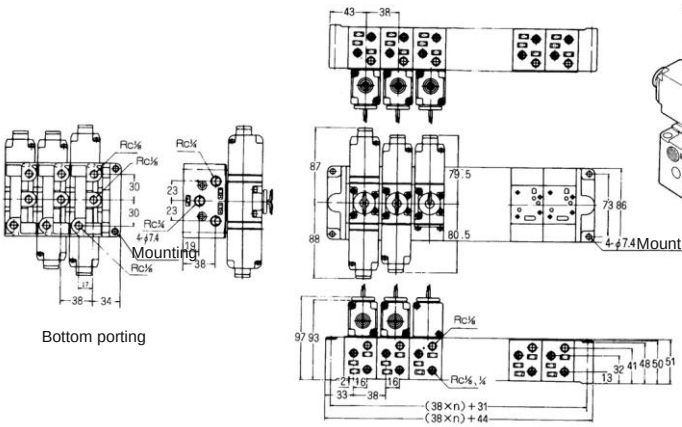

MF□-CI06

(Unit: mm)

Specifications for connection

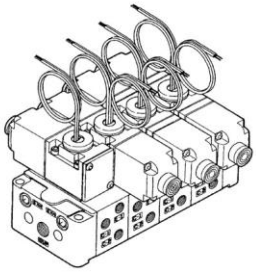

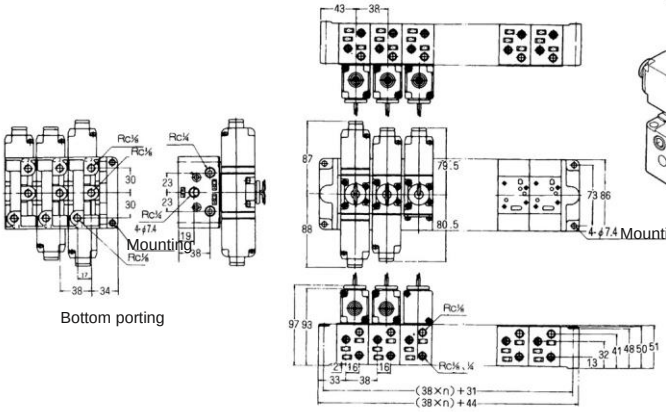

A

Gentle Automatic Solution Sdn Bhd

36,Jalan Industri USJ1/13,Taman Perindustrian USJ 1, 47600 Subang Jaya, Selangor Darul Ehsan, Malaysia.

Tel : + 603 - 8023 7743 / + 603 - 8023 8743 Mobile Number : + 6012 - 273 8827 / + 6012 - 2206172 / + 6017 - 3397388

Fax : + 603 - 8023 9743 Email : sales@gentle.com.my / myfontal@gmail.com

MF□-CC08~25 (Unit: mm)

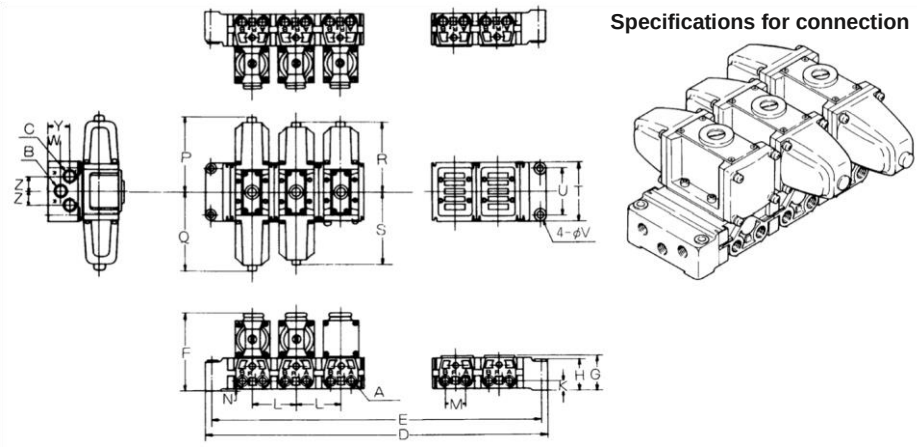

Specifications for connection

MF□-CI08~25 (Unit: mm)

Model No.	A (Rc)	B (Rc)	C (Rc)	C' (Rc)	D	E	F	G	H	J	K	L	M	N	P	Q	R	S	T	U	V	W
MF-CC08	¼		⅜	—						—												
MF-CI08	(⅜)	⅜	—	¼(⅜)	(70×n) +80	(70×n) +64	124.5	52	51	39.5	16.5	70	32	4	126	130	107	111	90	74	8.5	1
MF-CC10	⅜		½	—						—												
MF-CI10	(½)	½	—	⅜(½)	(90×n) +90	(90×n) +60	137.4	54	48	39.5	18..5	90	43	4	154	154	135	135	120	100	10.5	3
MF-CC15	½	¾	¾	—	(110×n) +110	(100×n) +80	157.5	69	60	— 49	23	110	52	4	175	175	165	165	144	120	12.5	3
MF-CI15			—	½																		
MF-CC25	¾		1	—			209.5			—												
MF-CI25	(1)	1	—	¾(1)	(150×n) +140	(150×n) +110	※219.5	85	80	59	29	150	73	4	254.9	254.9	201.9	201.9	200	170	15	5

• "n" is the nember of stations of manifold.

Gentle Automatic Solution Sdn Bhd
36,Jalan Industri USJ1/13,Taman Perindustrian USJ 1, 47600 Subang Jaya, Selangor Darul Ehsan, Malaysia.
Tel : + 603 - 8023 7743 / + 603 - 8023 8743 Mobile Number : + 6012 - 273 8827 / + 6012 - 2206172 / + 6017 - 3397388
Fax : + 603 - 8023 9743 Email : sales@gentle.com.my / myfontal@gmail.com

Bottom of manifold ported(Custom-made)

(Unit: mm)

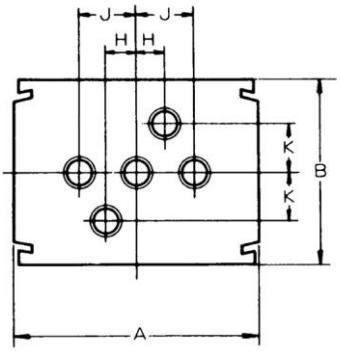

Model No.	Port size	A	B	K	J	H
MF□-CC08,C08	Rc¼, ⅜	90	70	20	28	12
MF□-CC10,C10	Rc⅜, ½	120	90	25	34	17
MF□-CC15,C15	Rc½, ¾	114	110	30	45	22.5

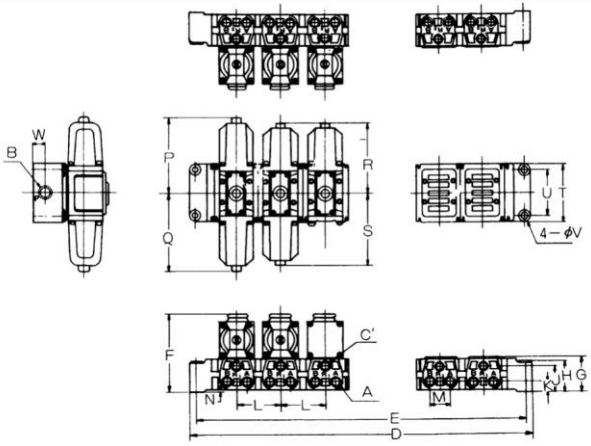

Specifications for connection

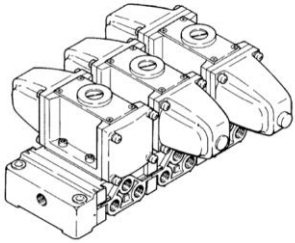

Adaptor(connect a manifold of different size)

(Unit: mm)

Model No.	MFA-C0608	MFA-C0810	MFA-C1015
Applicable manifold	MF-C□06 MF-C□08	MF-C□08 MF-C□10	MF-C□10 MF-C□15
X	24	30	40

Gentle Automatic Solution Sdn Bhd
36,Jalan Industri USJ1/13,Taman Perindustrian USJ 1, 47600 Subang Jaya, Selangor Darul Ehsan, Malaysia.
Tel : + 603 - 8023 7743 / + 603 - 8023 8743 Mobile Number : + 6012 - 273 8827 / + 6012 - 2206172 / + 6017 - 3397388
Fax : + 603 - 8023 9743 Email : sales@gentle.com.my / myfontal@gmail.com